

Air Brake Practice Test Questions and Answers

1. What is the minimum air pressure required before driving a vehicle with air brakes?

- A) 80 psi
- B) 90 psi
- C) 100 psi
- D) 120 psi

2. How often should you drain moisture from air brake system tanks?

- A) Weekly
- B) Monthly
- C) Daily
- D) Only when needed

3. What happens when the emergency brake is applied in an air brake system?

- A) Air pressure increases
- B) Spring brakes engage
- C) Service brakes release
- D) Compressor stops working

4. At what air pressure should the low air pressure warning signal activate?

- A) 40-45 psi
- B) 50-55 psi
- C) 60-70 psi
- D) 80-85 psi

Answers: 1-C 2-C 3-B 4-C

For More Air Brake Questions and Answers FREE, Air Brake Online Prep Training, Air Brake Exam, Air Brake Study Guide, Air Brake Flashcards, Air Brake Quizzes visit:

Air Brake Practice Test